



EnduraPanel

Bringing **colour** to life

Installation using EnduraPanel Jointing Systems

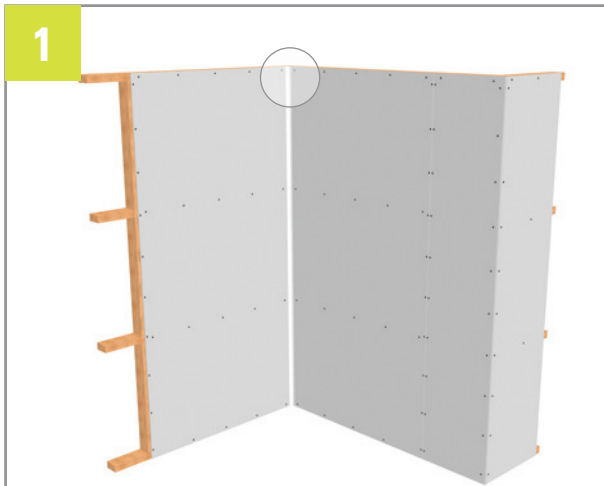


1 Install internal corner jointer

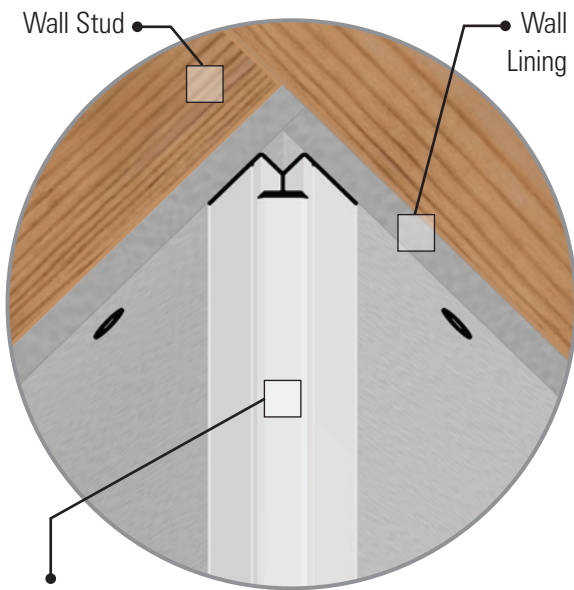


EnduraPanel Internal Jointer Extrusion

- Measure and cut internal corner to length
- Apply double-sided tape to full length of extrusion – both outside corners. Ensure good surface adhesion to extrusion by firmly pressing or rolling tape
- Remove backing paper from double-sided tape
- Install internal corner extrusion into corner. Be careful when using double-sided tape as once in contact with the wall, it can be difficult to remove and reuse
- Press or roll extrusion firmly into corner ensuring good surface adhesion with wall

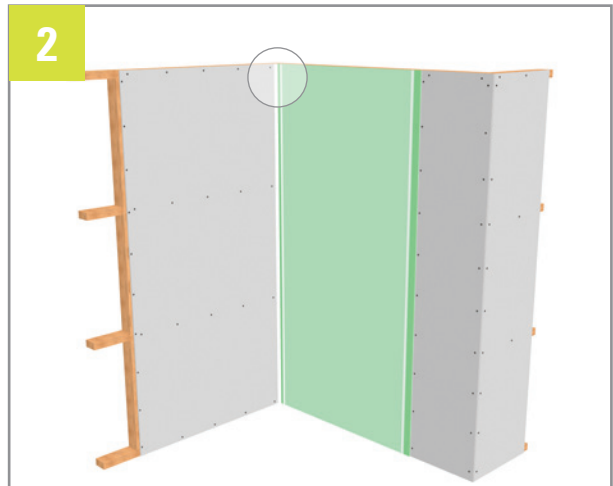

2 Install first EnduraPanel

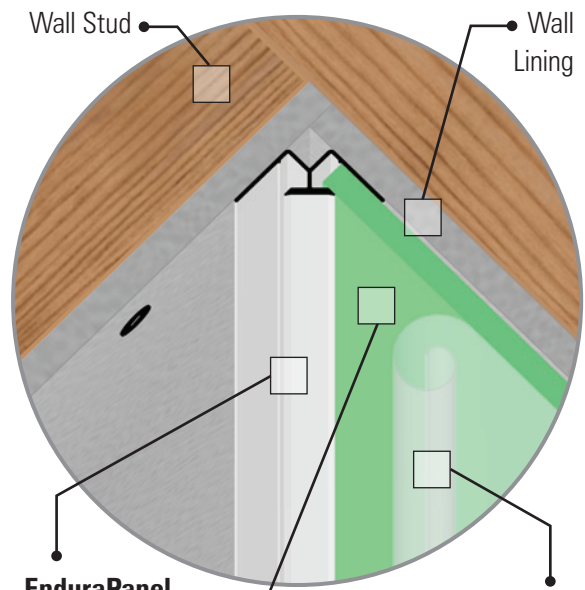

EnduraPanel Internal Jointer Extrusion

EnduraPanel

Peel back protective film 25mm before insertion

- Measure and cut EnduraPanel to size and geometry required, including any penetrations. De-bur all edges
- Remove protective film from the rear of panel
- Peel back protective film from the front face, at least 25mm from the edge to be inserted into the extrusion and the next edge to receive an extrusion
- Apply adhesive to specification
- Install leading edge into slot of extrusion up to the expansion lip
- Roll panel over the wall, smoothing out the sheet in the direction of installation
- Ensure panel is a good fit onto the wall
- Clean up any adhesive that spills out onto the wall



3

Install flat jointer - short edge first

Wall Stud

Wall Lining

Protective film

EnduraPanel Jointer Extrusion

Install short edge first up to expansion lip

- Measure and cut flat jointer to length
- If you wish to secure this extrusion, apply double-sided tape to full length of extrusion. Ensure good surface adhesion to extrusion by firmly pressing or rolling tape
- Remove backing from double-sided tape
- Ensure protective film is peeled back from trailing edge of EnduraPanel
- Install flat jointer onto trailing edge of EnduraPanel, short edge first

4

Install next EnduraPanel

Wall Stud

Wall Lining

EnduraPanel Jointer Extrusion

Peel back protective film 25mm before insertion

- Measure and cut EnduraPanel to size and geometry required. De-bur all edges
- Remove protective film from the rear of panel.
- Peel back protective film from the front face, at least 25mm from the edge to be inserted into the extrusion and the next edge to receive an extrusion
- Apply adhesive to specification
- Install leading edge into slot of extrusion up to the expansion lip
- Roll panel over the wall, smoothing out the sheet in the direction of installation
- Ensure panel is a good fit onto the wall
- Clean up any adhesive that spills out onto the wall



5

Install external corner jointer

EnduraPanel External Extrusion

- Measure and cut external corner jointer to length
- If you wish to secure this extrusion, apply double-sided tape to full length of extrusion – both inside corners. Ensure good surface adhesion to extrusion by firmly pressing or rolling tape
- Remove backing film from double-sided tape
- Ensure protective film is peeled back from trailing edge of EnduraPanel
- Install External Corner Extrusion into corner. Be careful when using double-sided tape as once in contact with the wall, it can be difficult to remove and reuse
- Press or roll extrusion firmly into corner ensuring good surface adhesion with wall

6

Install next EnduraPanel

EnduraPanel External Extrusion

- Measure and cut EnduraPanel to size and geometry required. De-bur all edges
- Remove protective film from the rear of panel
- Peel back protective film from the front face, at least 25mm from the edge to be inserted into the extrusion and the next edge to receive an extrusion
- Apply adhesive to specification
- Install leading edge into slot of extrusion up to the expansion lip
- Roll panel over the wall, smoothing out the sheet in the direction of installation
- Ensure panel is a good fit onto the wall
- Cleanup any adhesive that spills out onto the wall



7

Install edge cap

EnduraPanel Edge Cap


- Measure and cut edge cap extrusion to length
- If you wish to secure this extrusion, apply double-sided tape to full length of extrusion. Ensure good surface adhesion to extrusion by firmly pressing or rolling tape
- Remove backing paper from double-sided tape
- Ensure protective film is peeled back from trailing edge of EnduraPanel
- Install edge cap extrusion onto trailing edge of EnduraPanel. Be careful when using double-sided tape as once in contact with the wall, as it can be difficult to remove and reuse
- Press or roll extrusion firmly into corner ensuring good surface adhesion with wall

8

Install final EnduraPanel up to existing jointer

EnduraPanel Internal Extrusion


- Measure and cut EnduraPanel to size and geometry required. De-bur all edges
- Remove protective film from the rear of panel.
- Peel back protective film from the front face, at least 25mm from the edge to be inserted into the extrusion and the next edge to be inserted into the terminal extrusion
- Apply adhesive to specification
- Install leading edge into slot of extrusion up to the expansion lip
- Roll panel over the wall, smoothing out the sheet in the direction of installation
- Ensure panel is a good fit onto the wall
- Cleanup any adhesive that spills out onto the wall

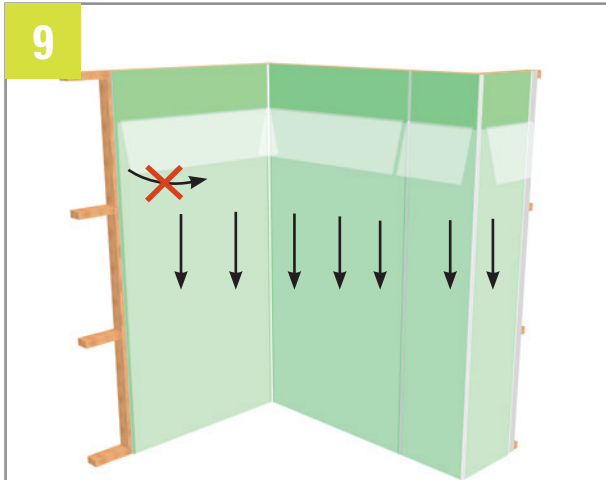

Removal of protective film

Protective film should be left as long as possible as it will offer surprising protection from abrasion and scratching.

- When removing protective film, start at the top of each panel and peel off in a downwards motion towards the floor
- Never pull the film out at right angles to the panel as this can pull the panel off the wall
- Dispose of all rubbish thoughtfully

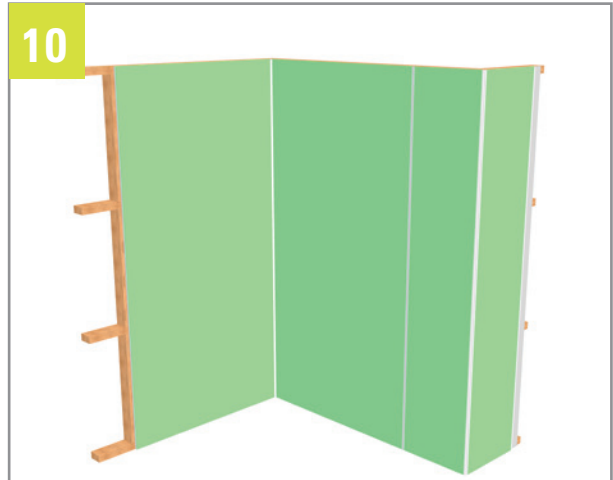

Clean installation

After removal of protective film, clean the entire installation with methylated spirits or isopropyl alcohol. Solvent residue should be removed by washing immediately.